

Maintenance

DO NOT use bleach, concentrated cleaners, or solvents under any circumstances.

DO NOT water blast/pressure blast fixtures

DO NOT use abrasive or polishing compounds.

Powder Coated Aluminium

If these luminaires are mounted close to the sea, it is highly recommended that the luminaires are washed down with fresh water regularly, to avoid salt build up which is deposited by the sea air onto the luminaire.

Solid Brass

Brass will age naturally and will patina over time, it is not necessary to clean brass frequently. When they do require cleaning, wipe them with a damp cloth.

316 Stainless Steel

To maintain the finish of 316 stainless steel it is recommended to wash the luminaire with fresh water from time to time to stop salt and corrosive elements building up. If tea staining appears, a commercially available stainless steel cleaner is recommended to remove this.

Electro polished 316 stainless steel still requires regular maintenance and washing with fresh water, even under an eave or roof as the build up of salt deposit will not be washed away by rain.

Warranty Info

To meet LUXR's **BLACK LABEL WARRANTY** please read before installing the luminaire.

Use relay outputs for photocells and timers to prevent power supply failure.

If the mounting surface is to be acid washed, the luminaire must be removed prior to avoid damage to the luminaire

DO NOT connect the secondary side/output of a live power supply to the luminaire, as this will cause a spike in voltage that can damage the LED.

When connecting or disconnecting the luminaire, always ensure the 110/240V power supply is disconnected.

Make sure waterproof connections are made to the luminaire input cables and dimming cables. A non waterproof connection will allow water ingress into power supply/ luminaire which can lead to failure.



*T&C's apply. See website for details:
hunzalighting.com/warranty

Modux Two and Four Hanging Light



Installation & Care Instructions

© 2025 LuxR Ltd

Contact

Ph: +64 9 528 9471

E: info@hunza.co.nz


Web: luxrled.com



Installation


Please note these instructions must not contravene your local electrical authority regulations, with which all instructions herein must comply. Please keep instructions for future reference.

1. Run low voltage cable in flexible conduit.
2. Make waterproof cable connections using adhesive lined heat shrink to the luminaires input cables, refer to wiring guide for correct wiring.
3. Attach the stainless steel wire to the tree or mounting surface securely. Adjust the wire clamp to hang the fixture to its desired height. Cut the excess wire. The input cable should not be taut, all the weight of the fixture should hang on the stainless steel wire.

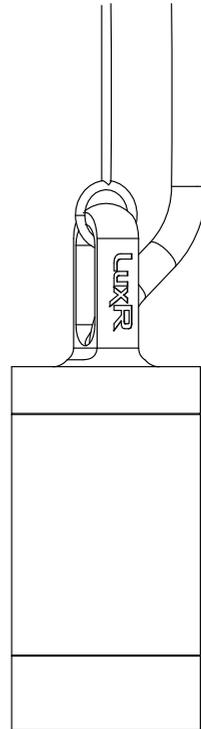


Wiring Guide

Circuit: Wire in Series With Remote Driver
Please see installation instructions for full details.

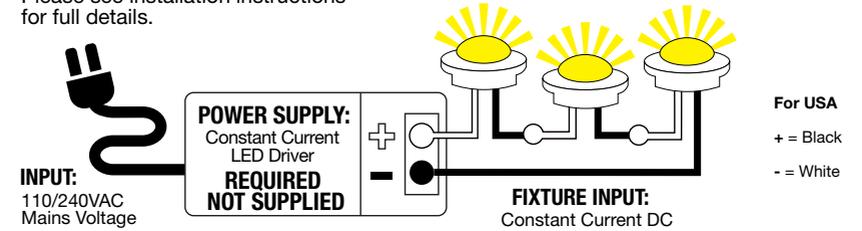

Circuit: 12VAC - Wire in Parallel
Please see installation instructions for full details.

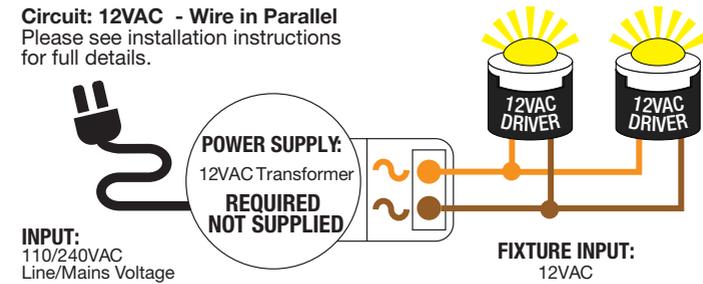

Circuit: 24VDC - Wired In Parallel
Please see installation instructions for full details.

